 
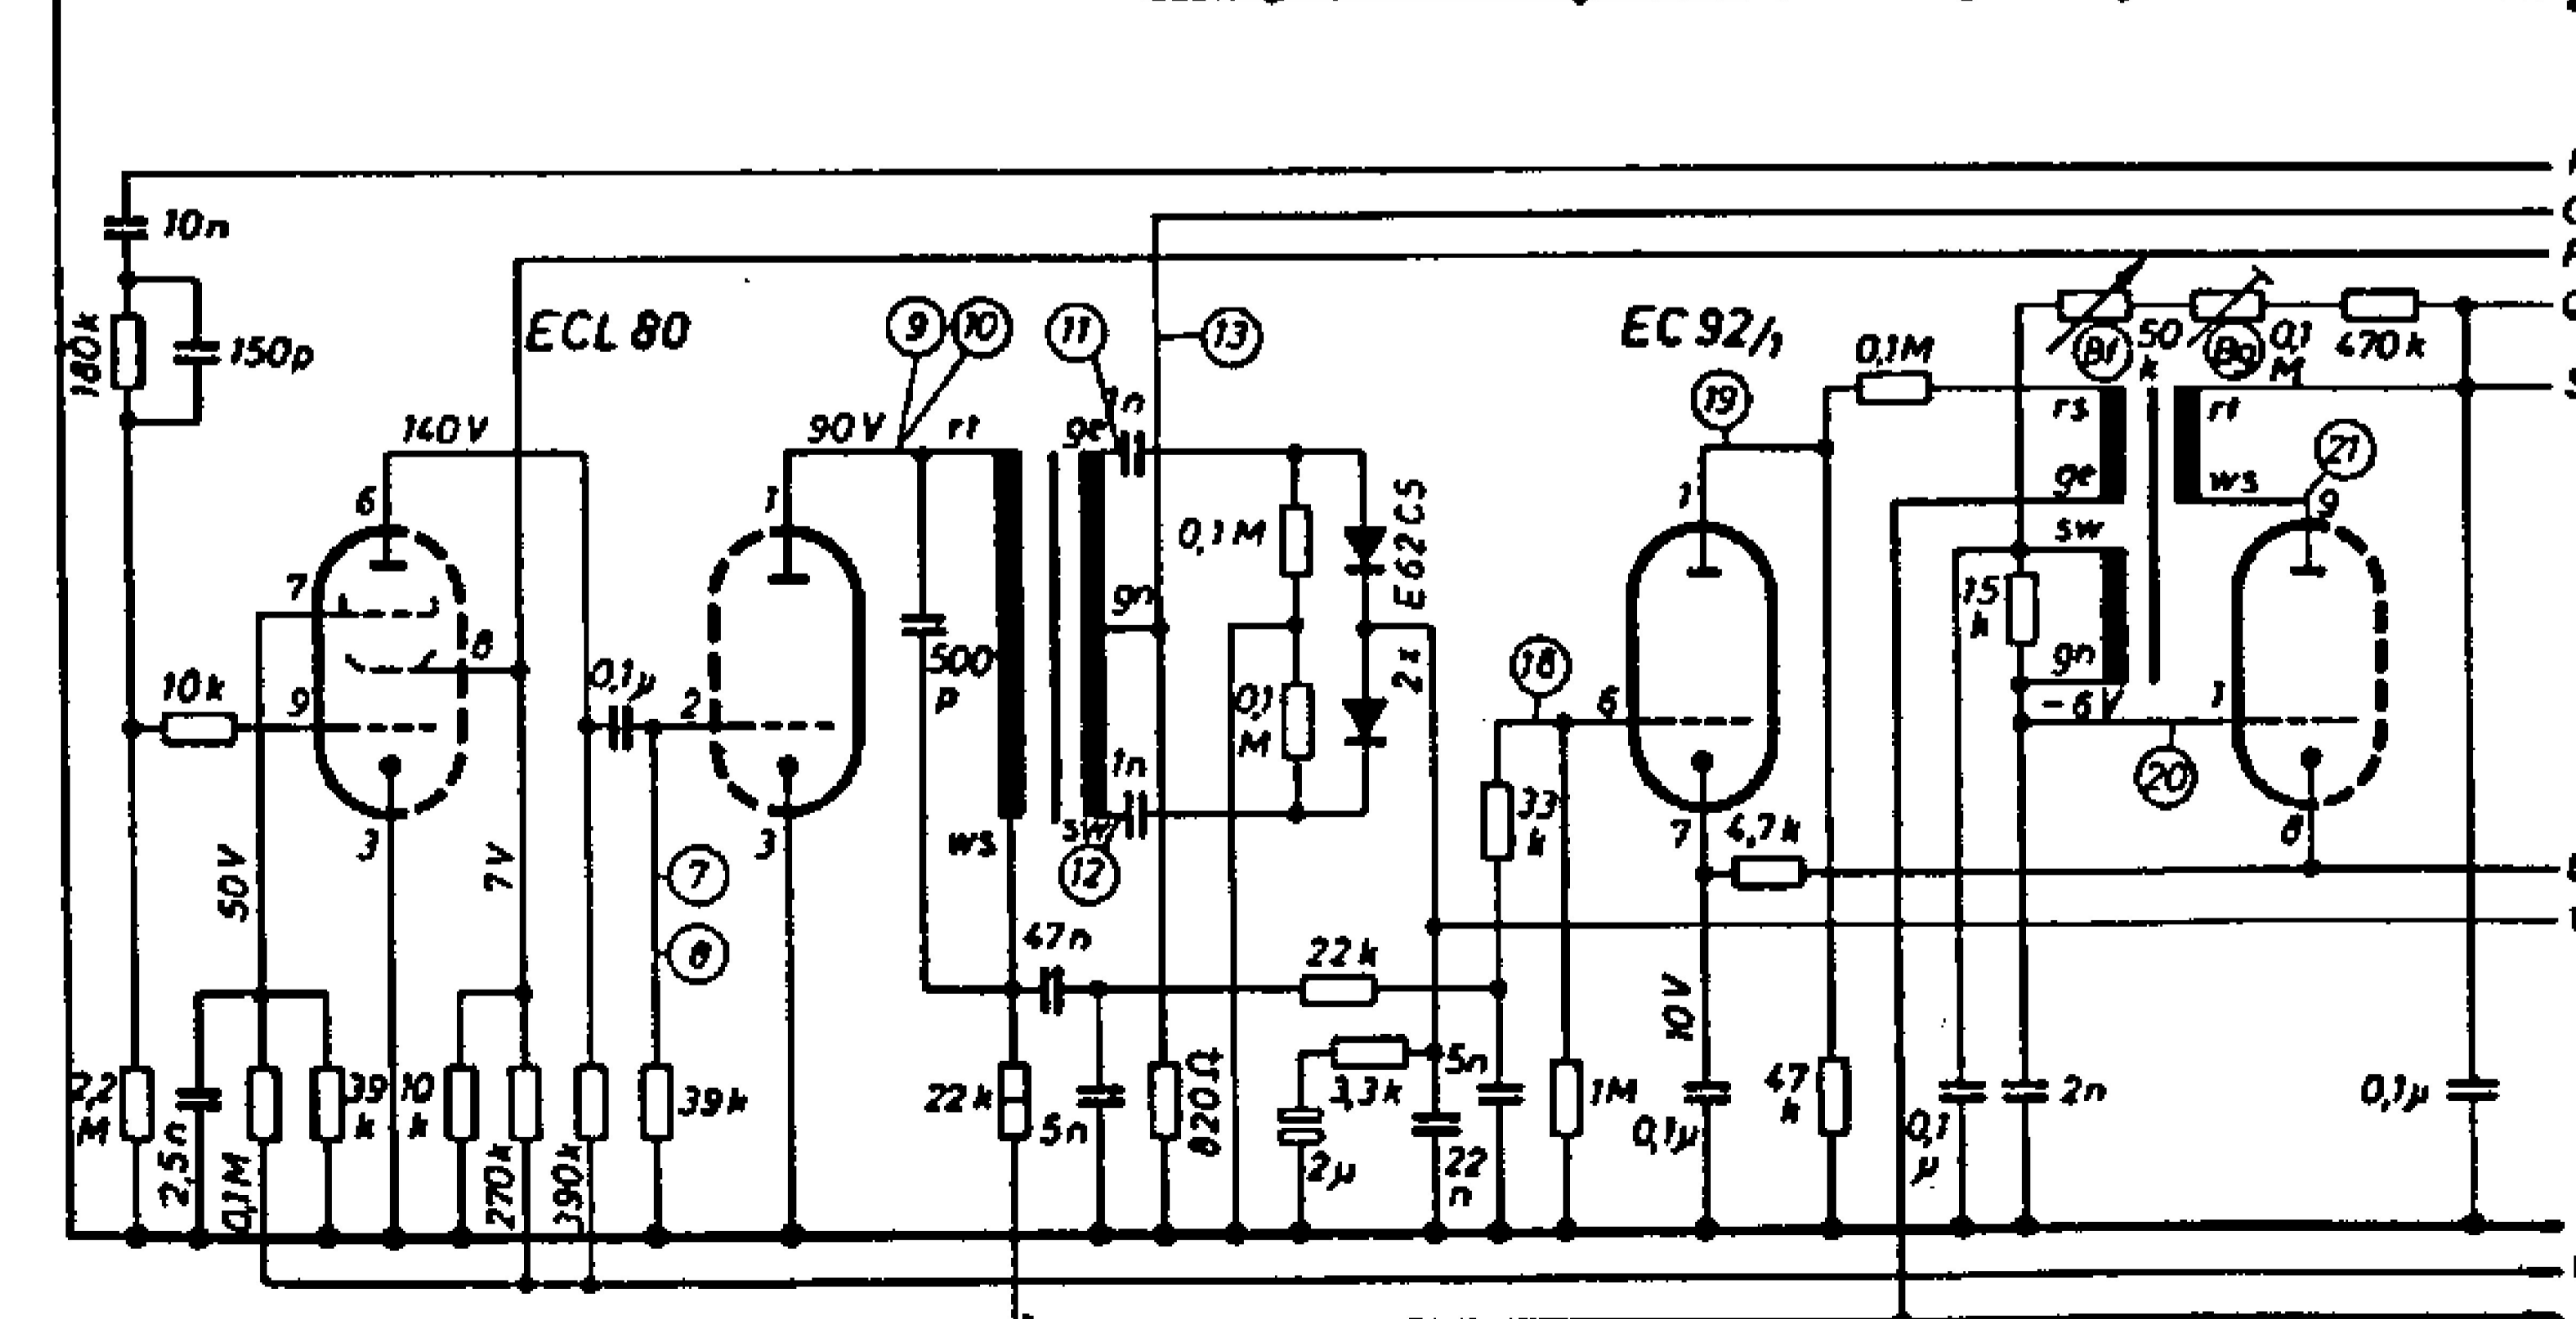 
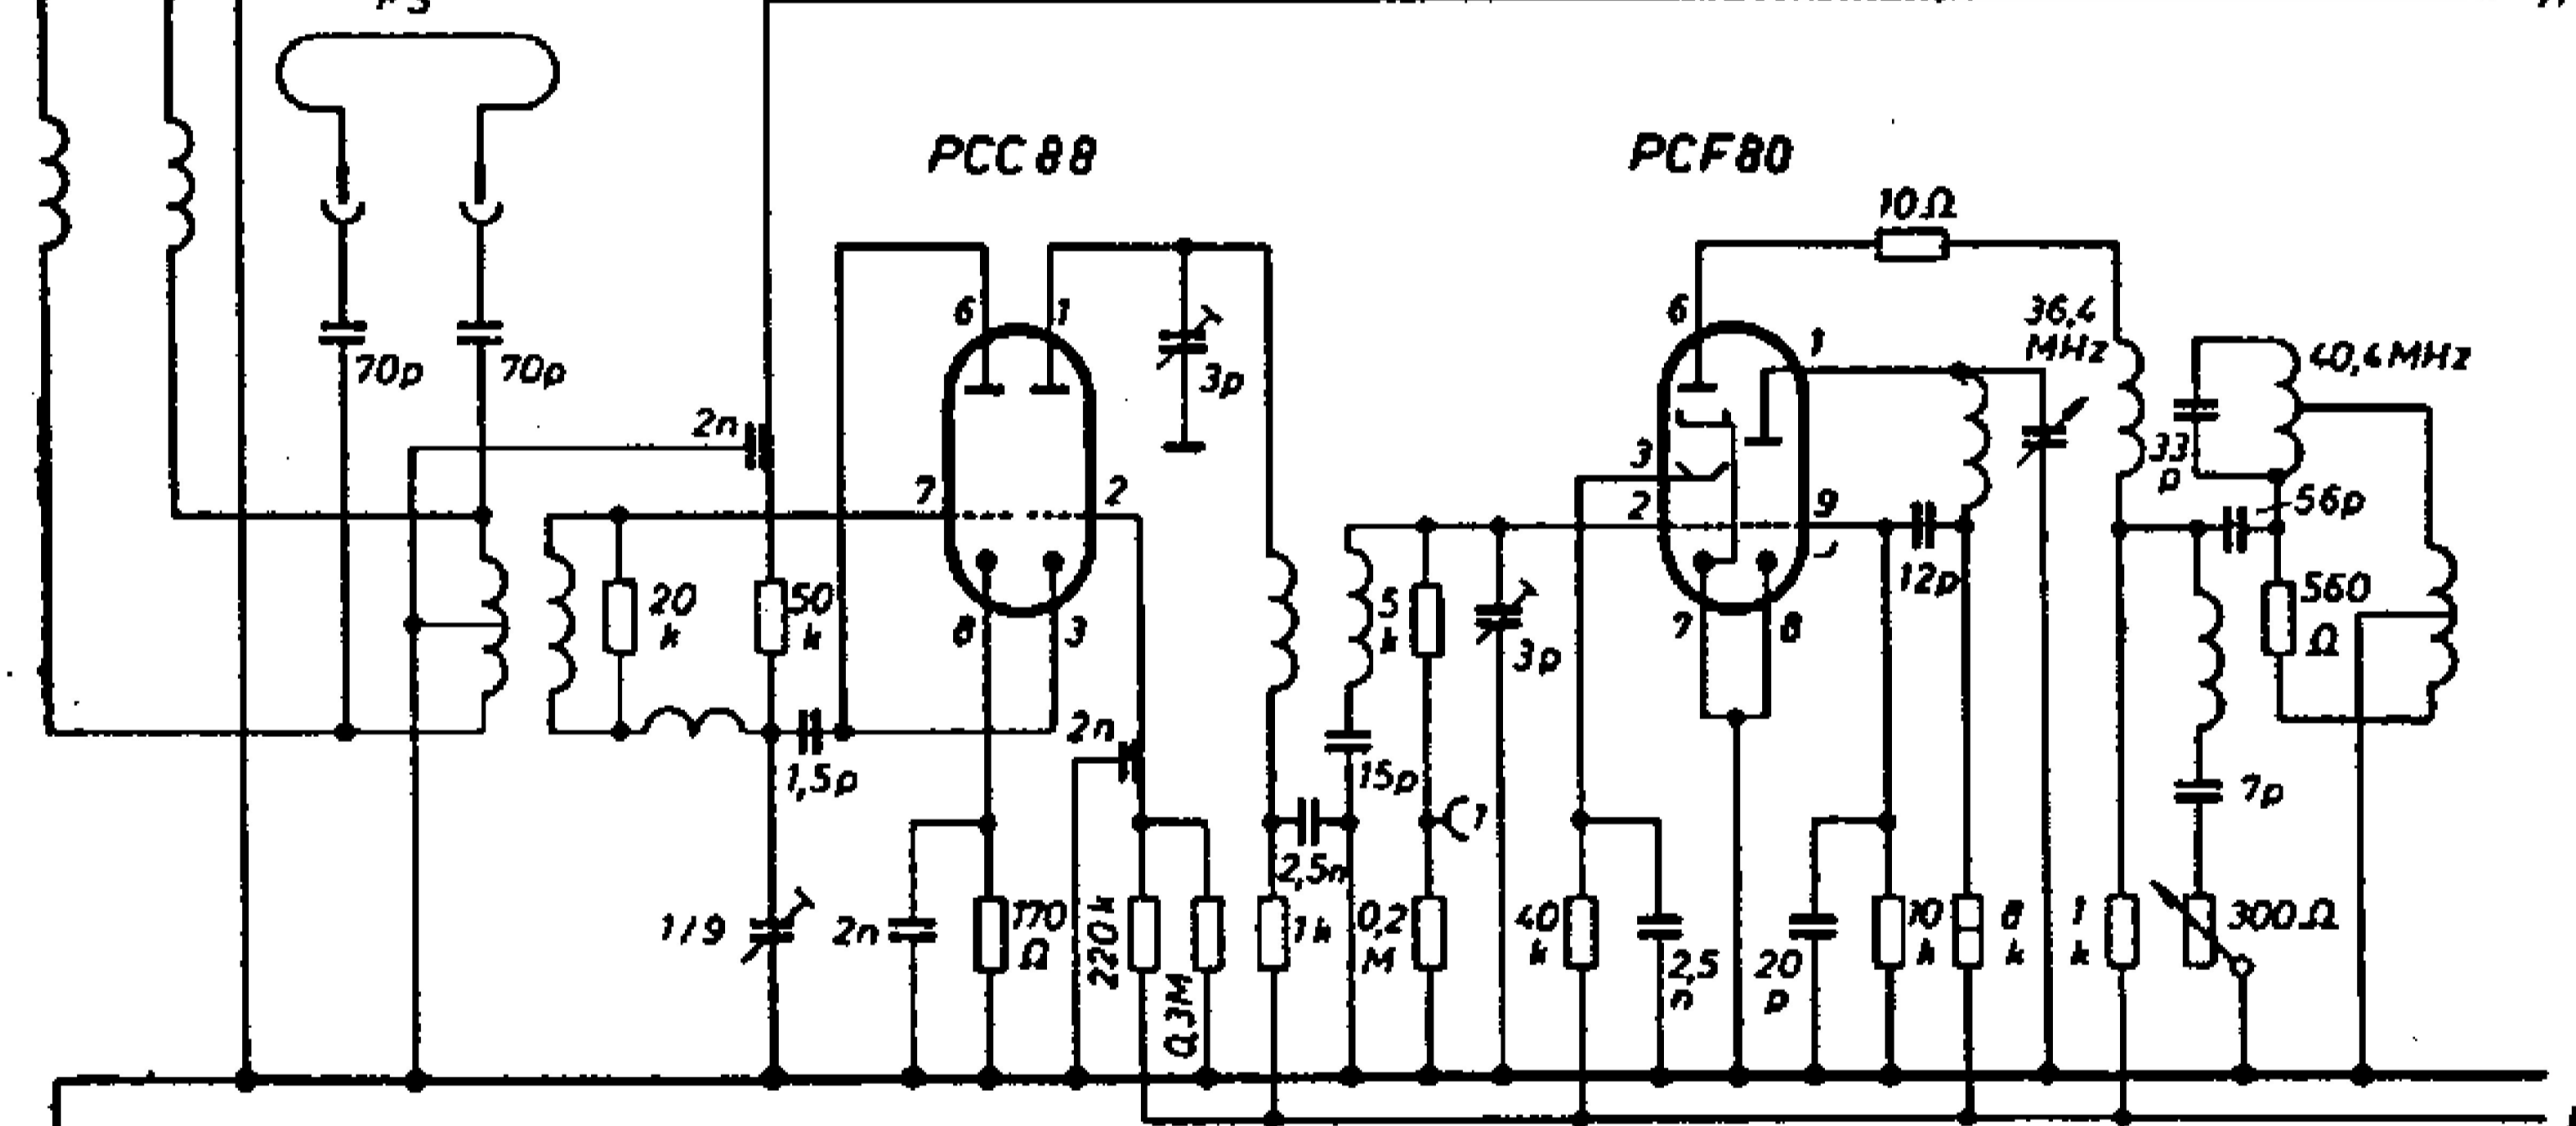 


UKW


Grundig passion

Grundig 348

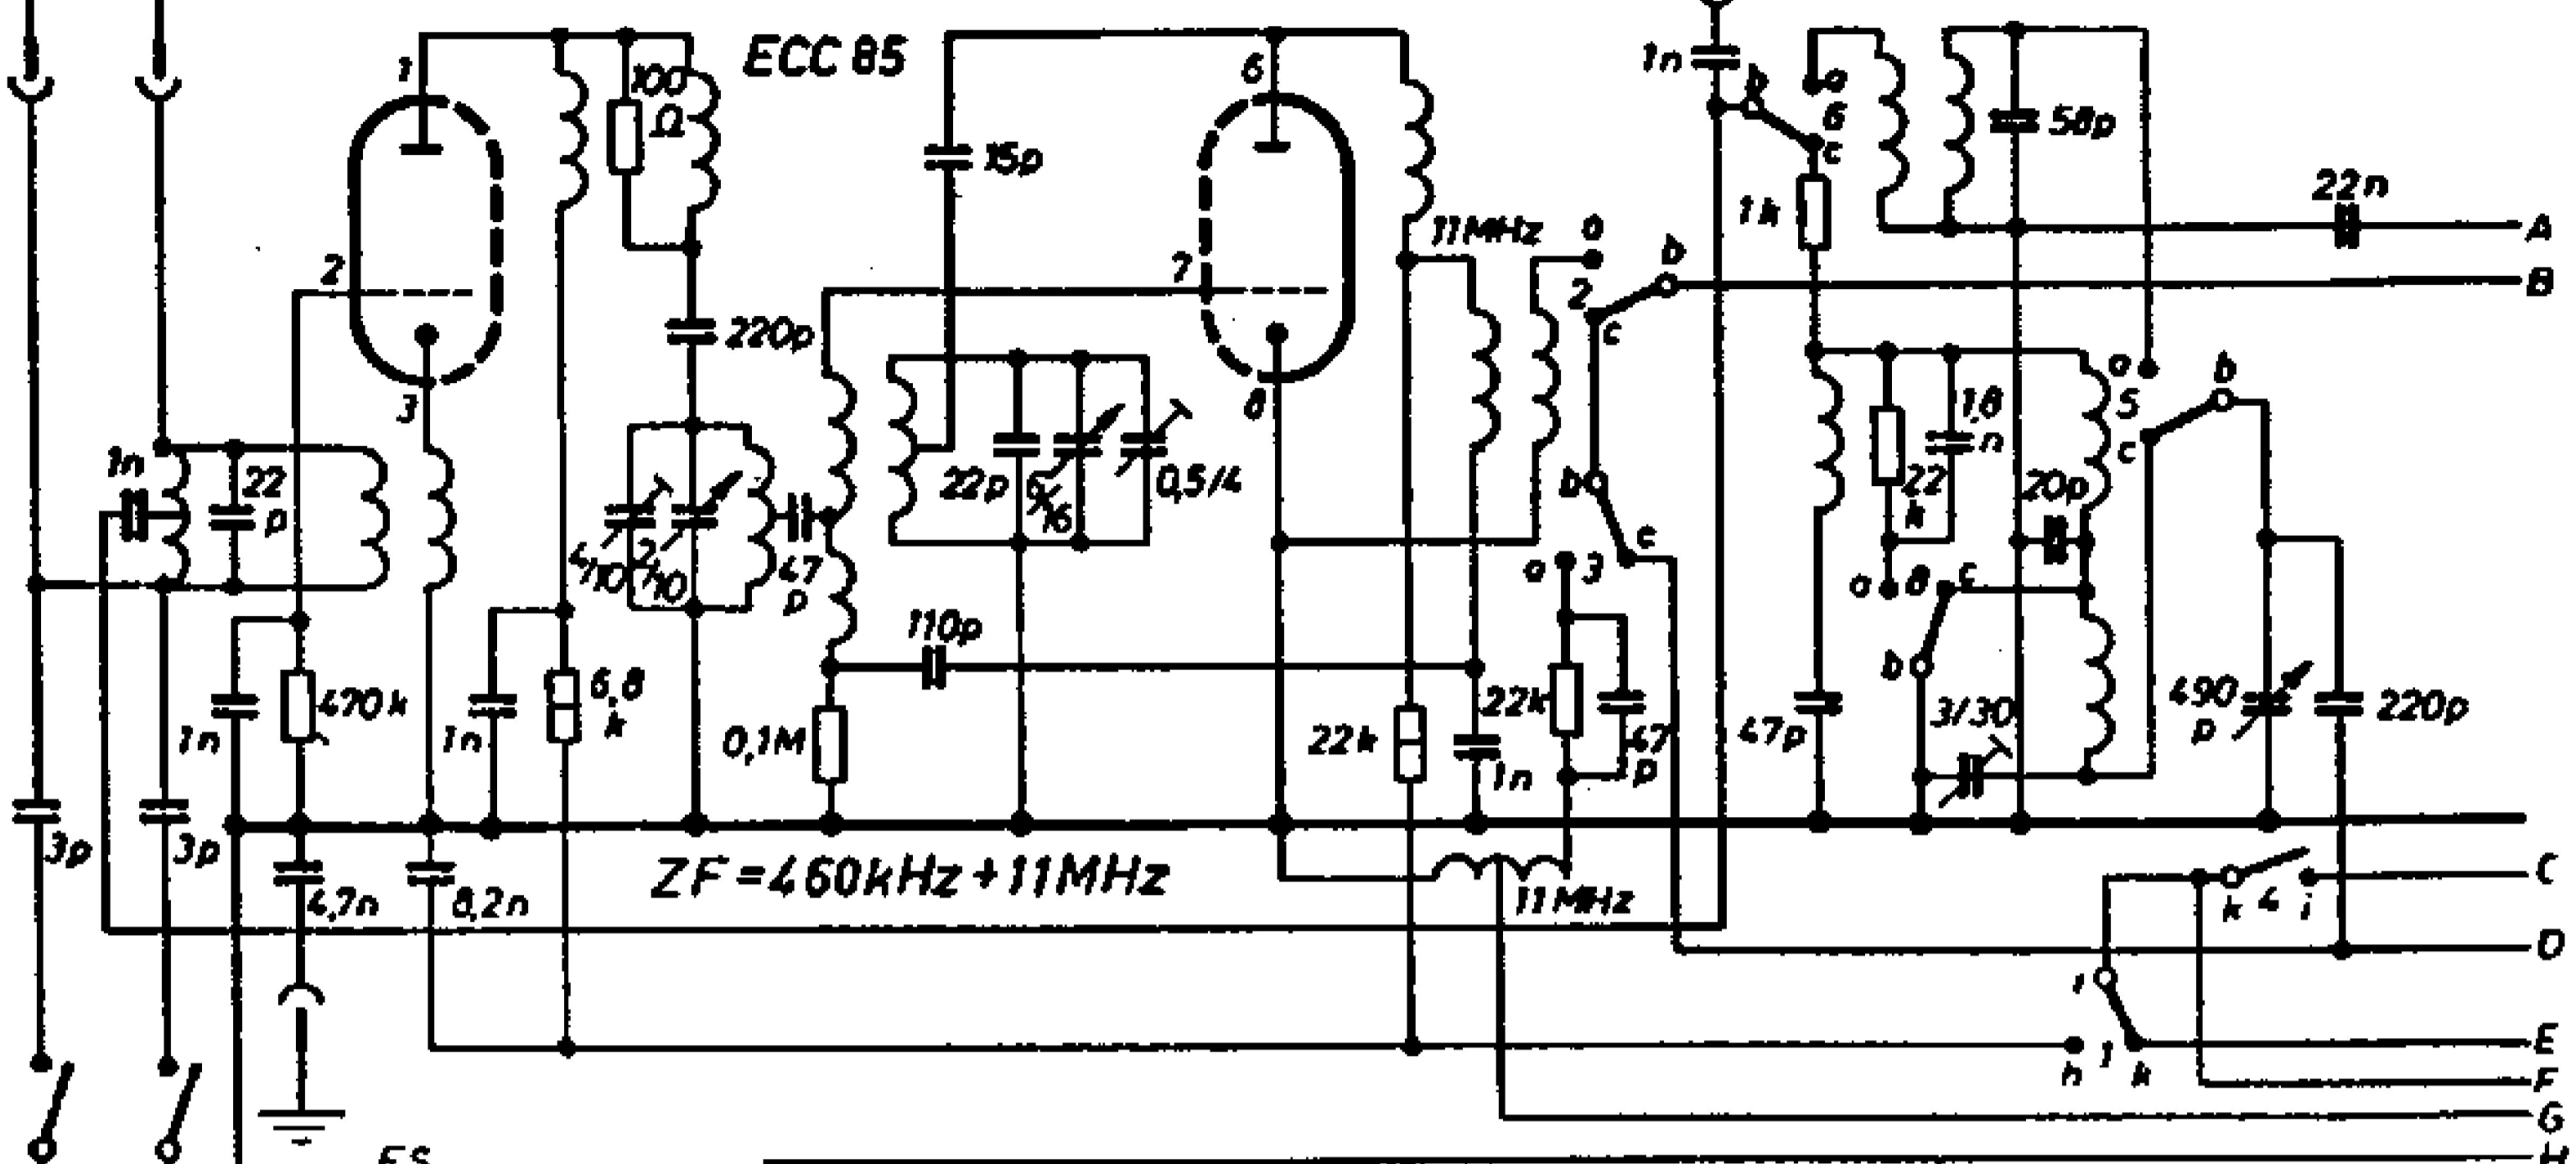

ECH 81

 
EF 89

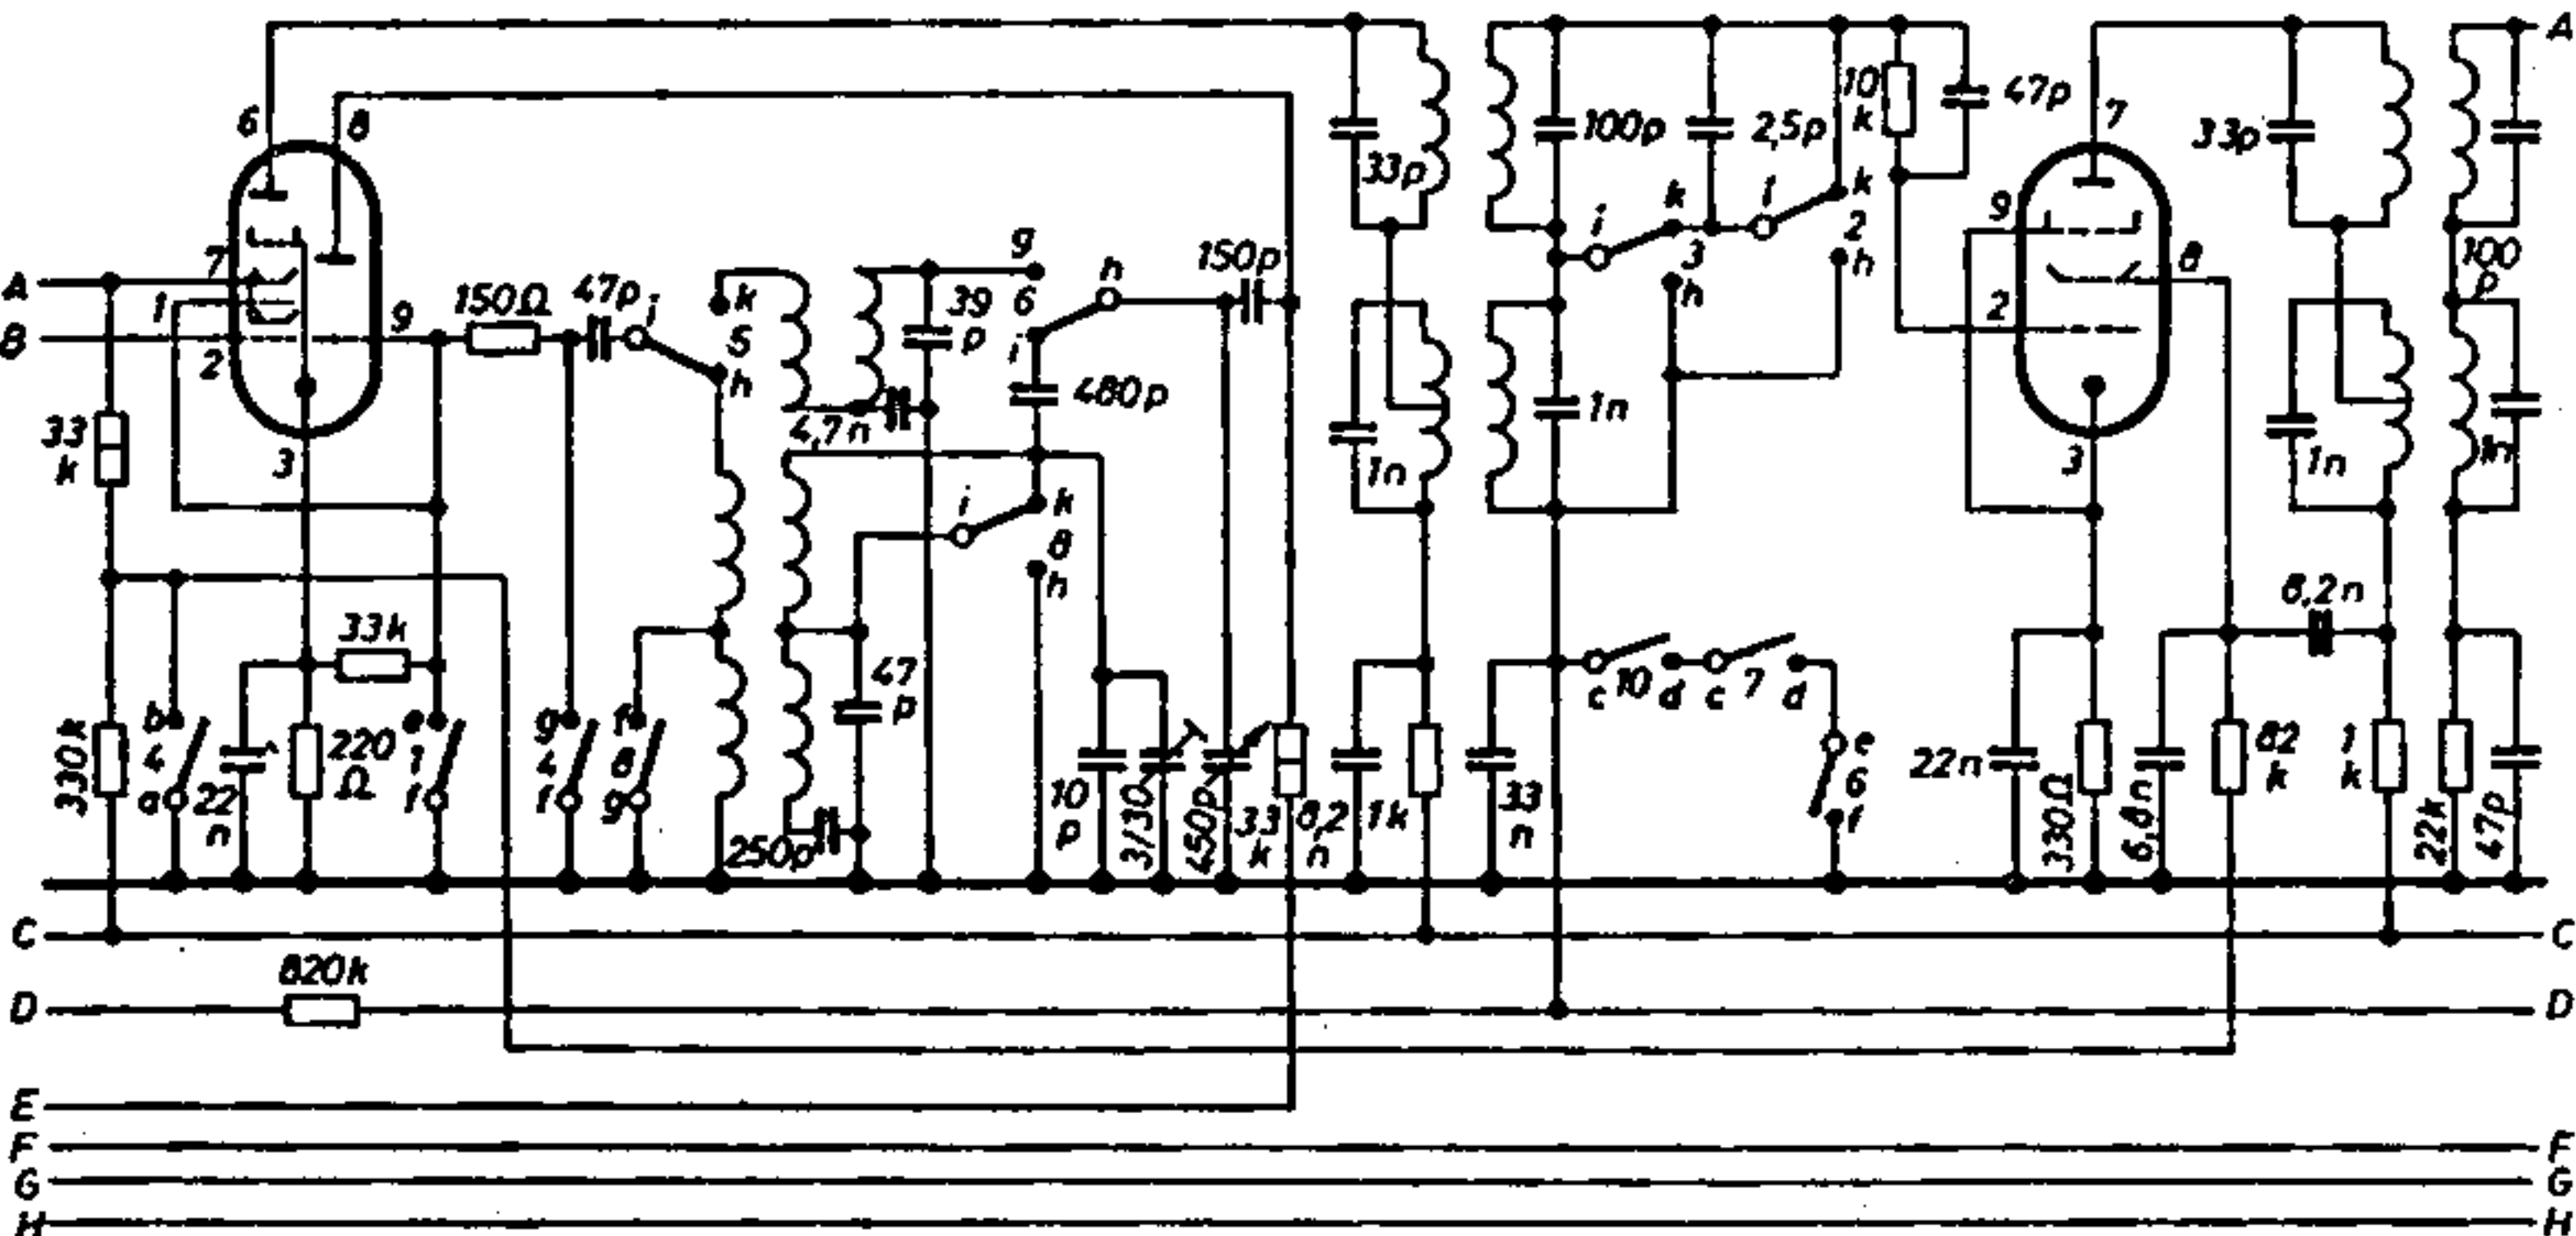

EF 80/2

EF 80/3

 
EF 80/4

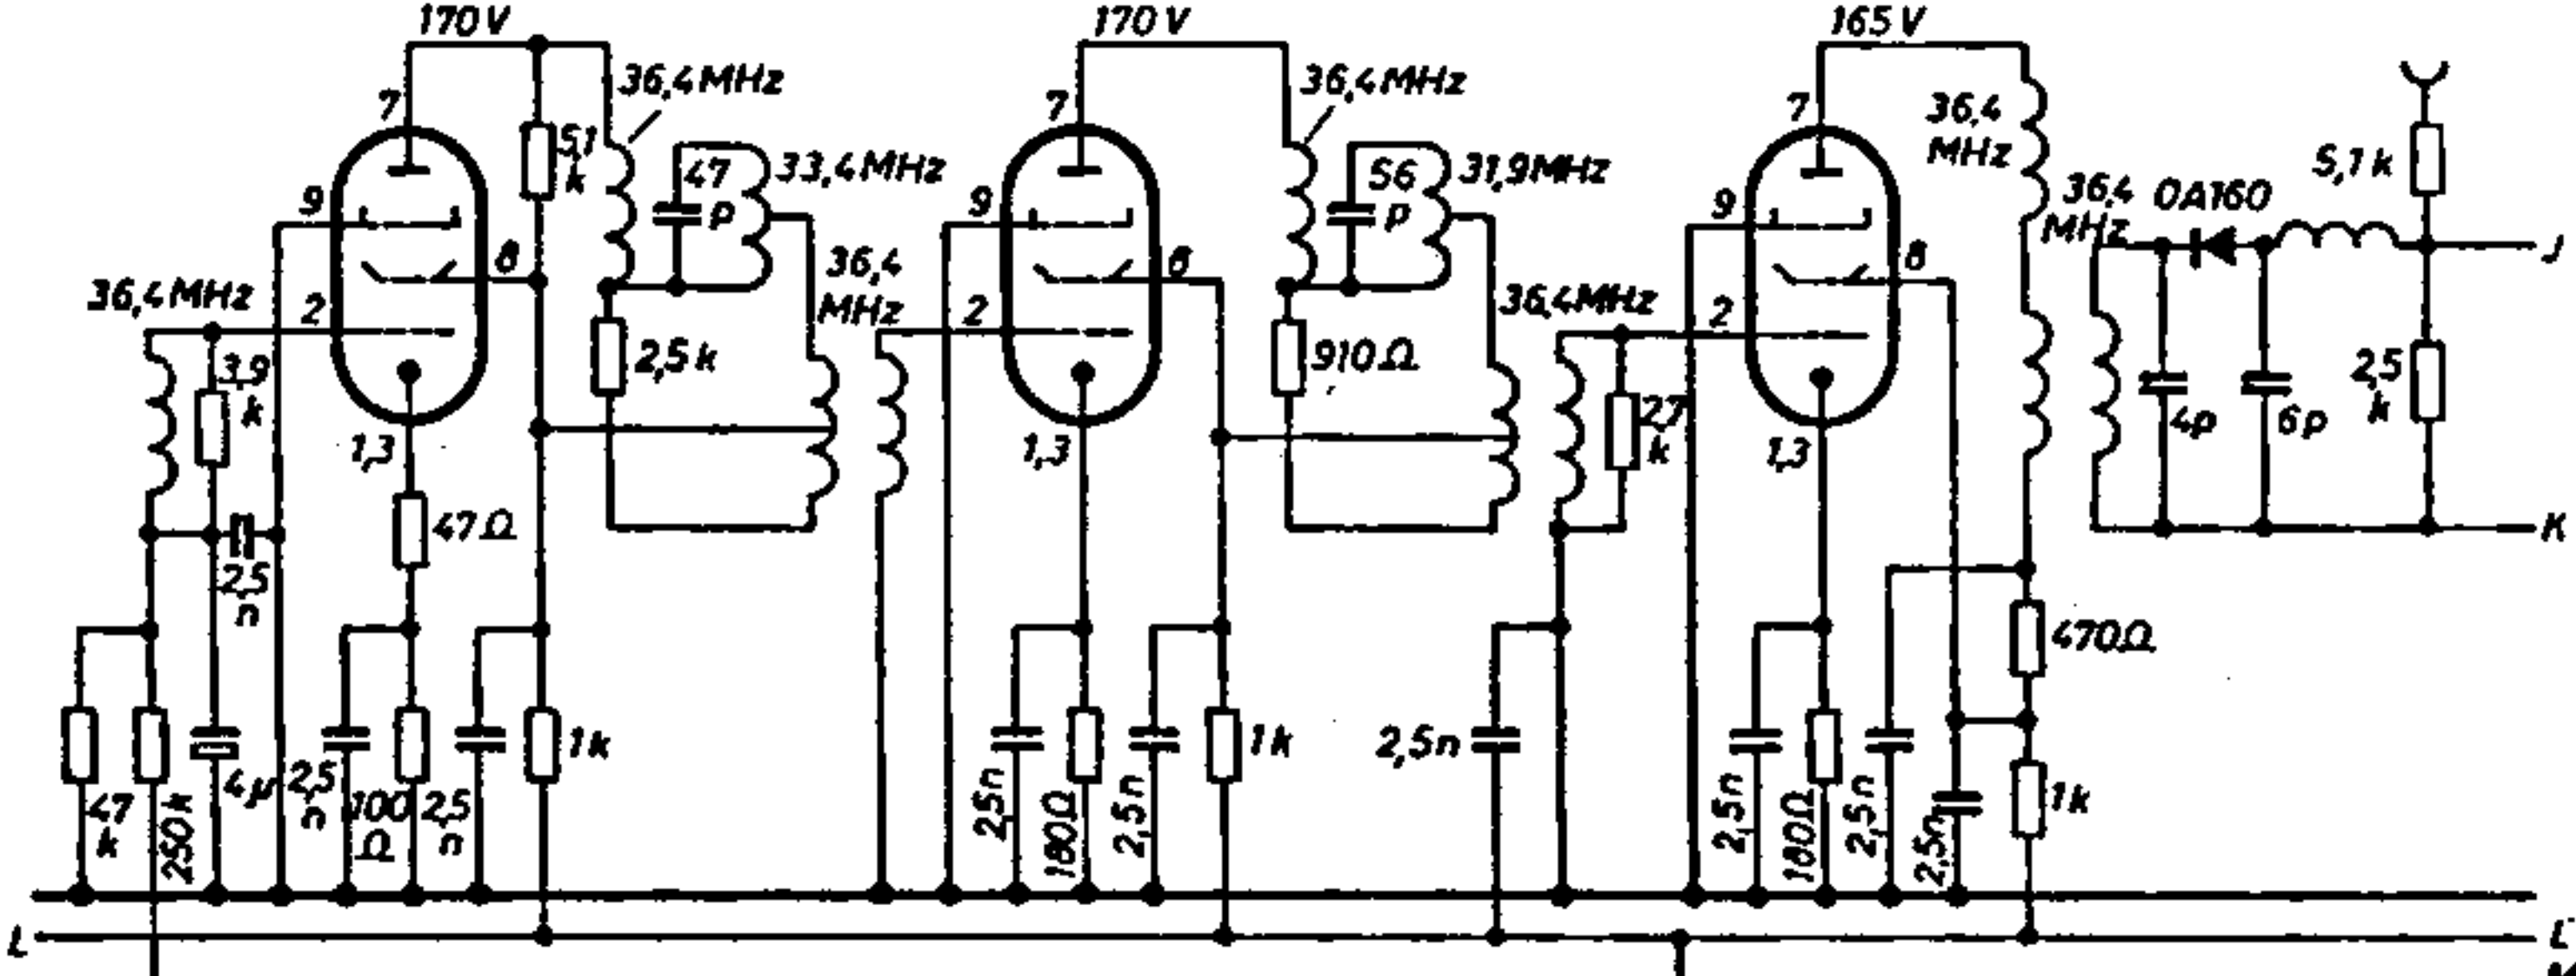

PCL 82

EC 92/2

 Grundlo 348

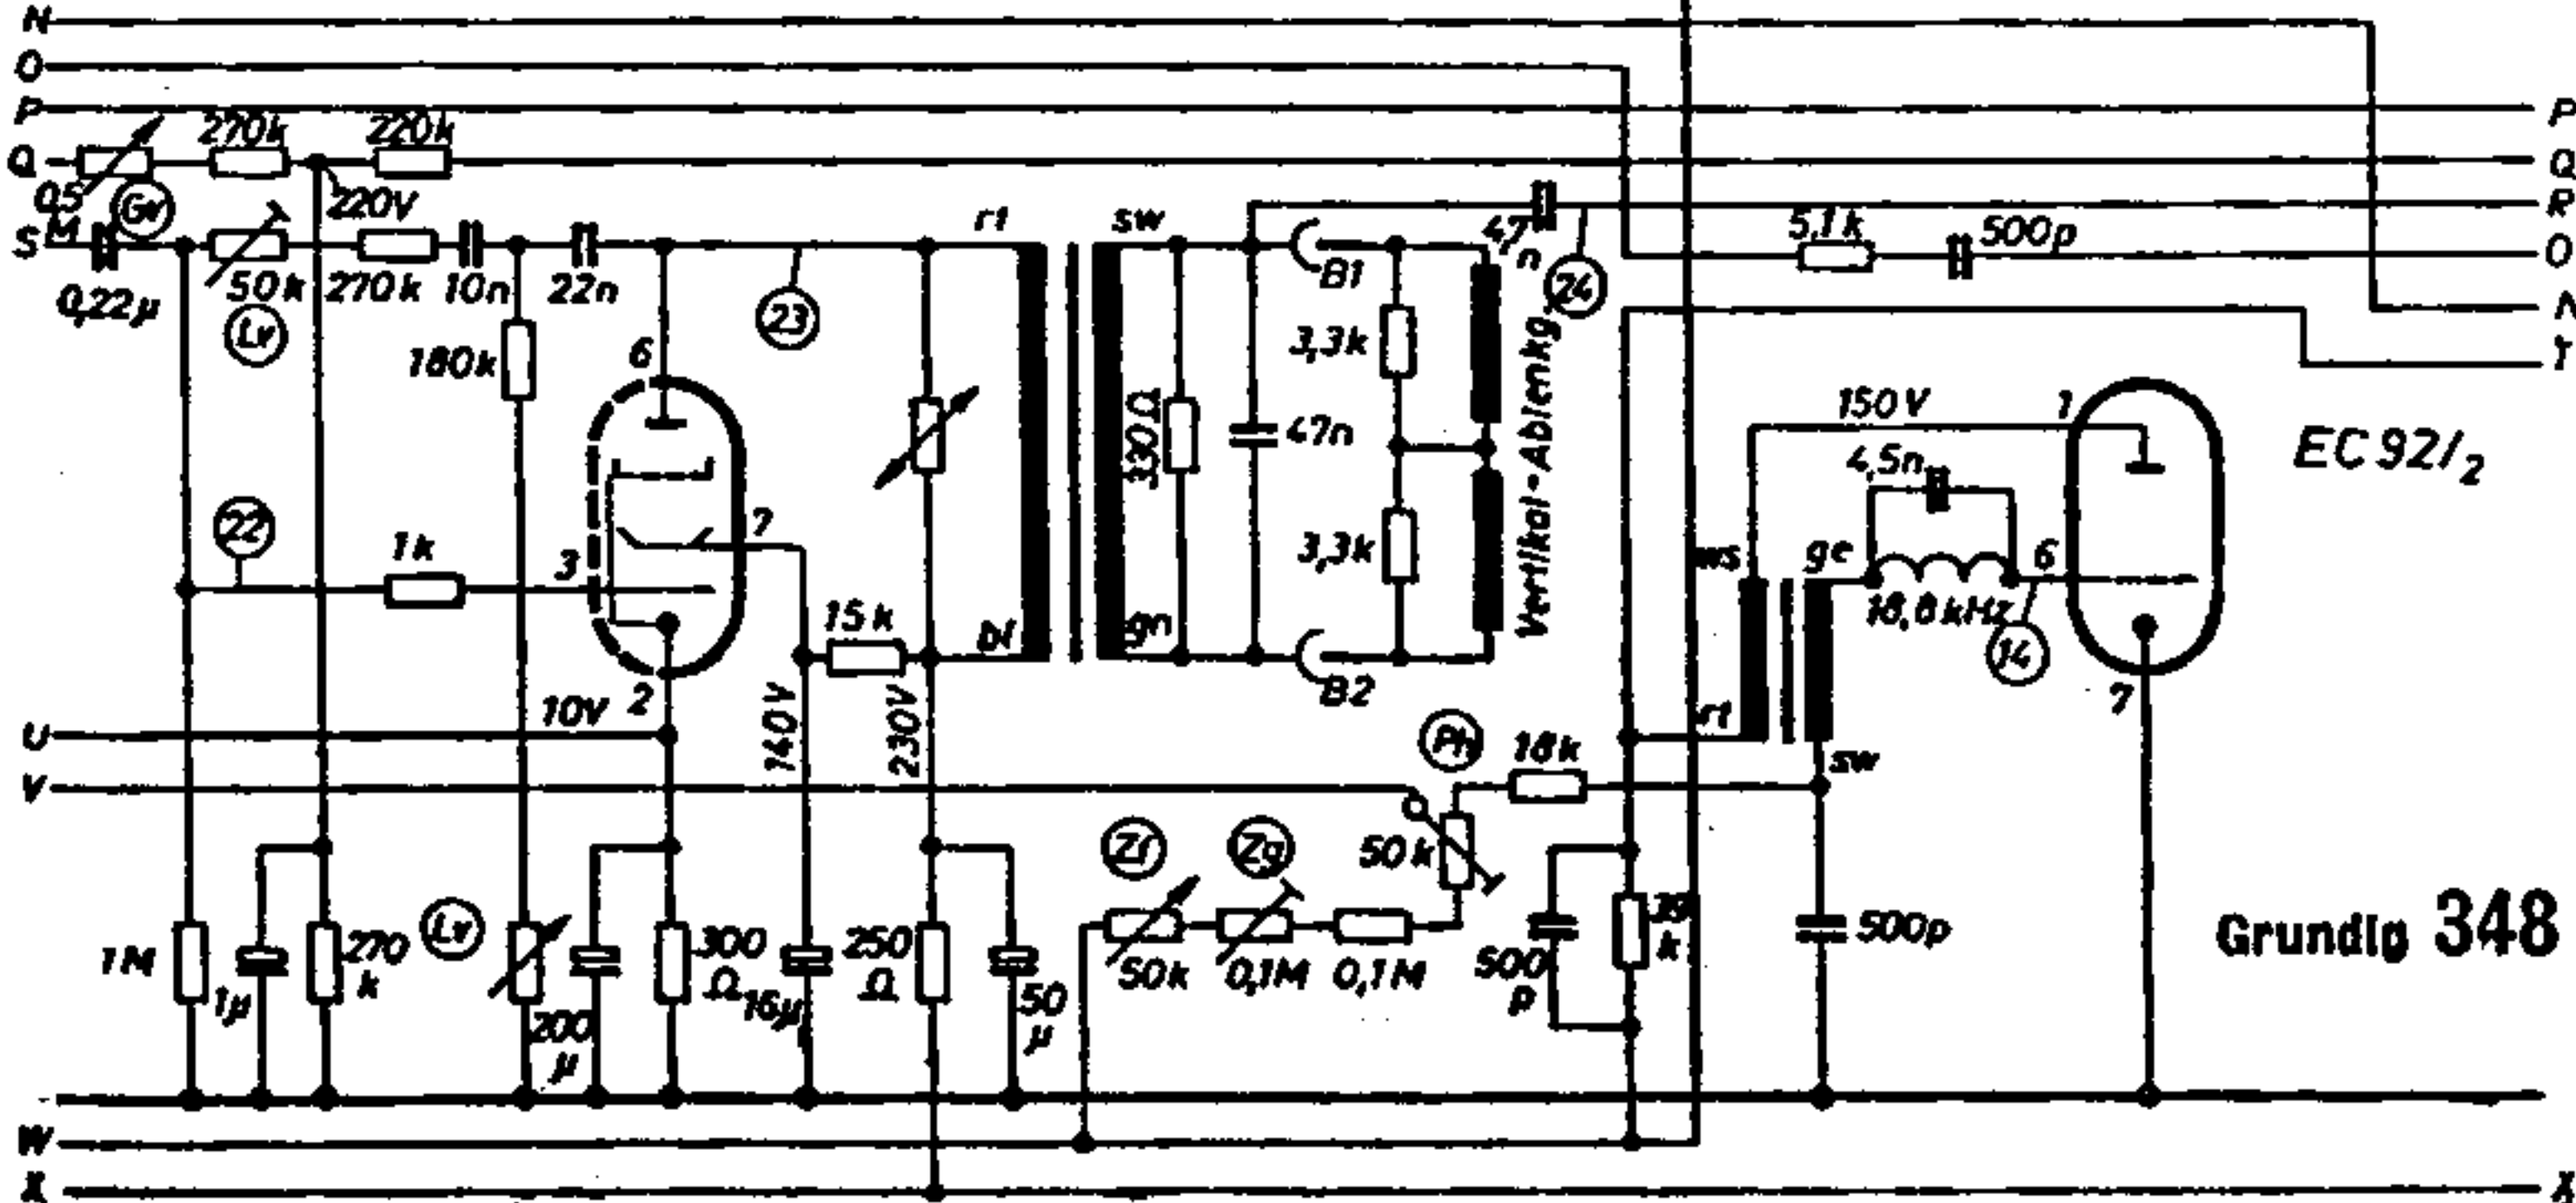


EF801,

RL233

EBC 41

 EC921/3







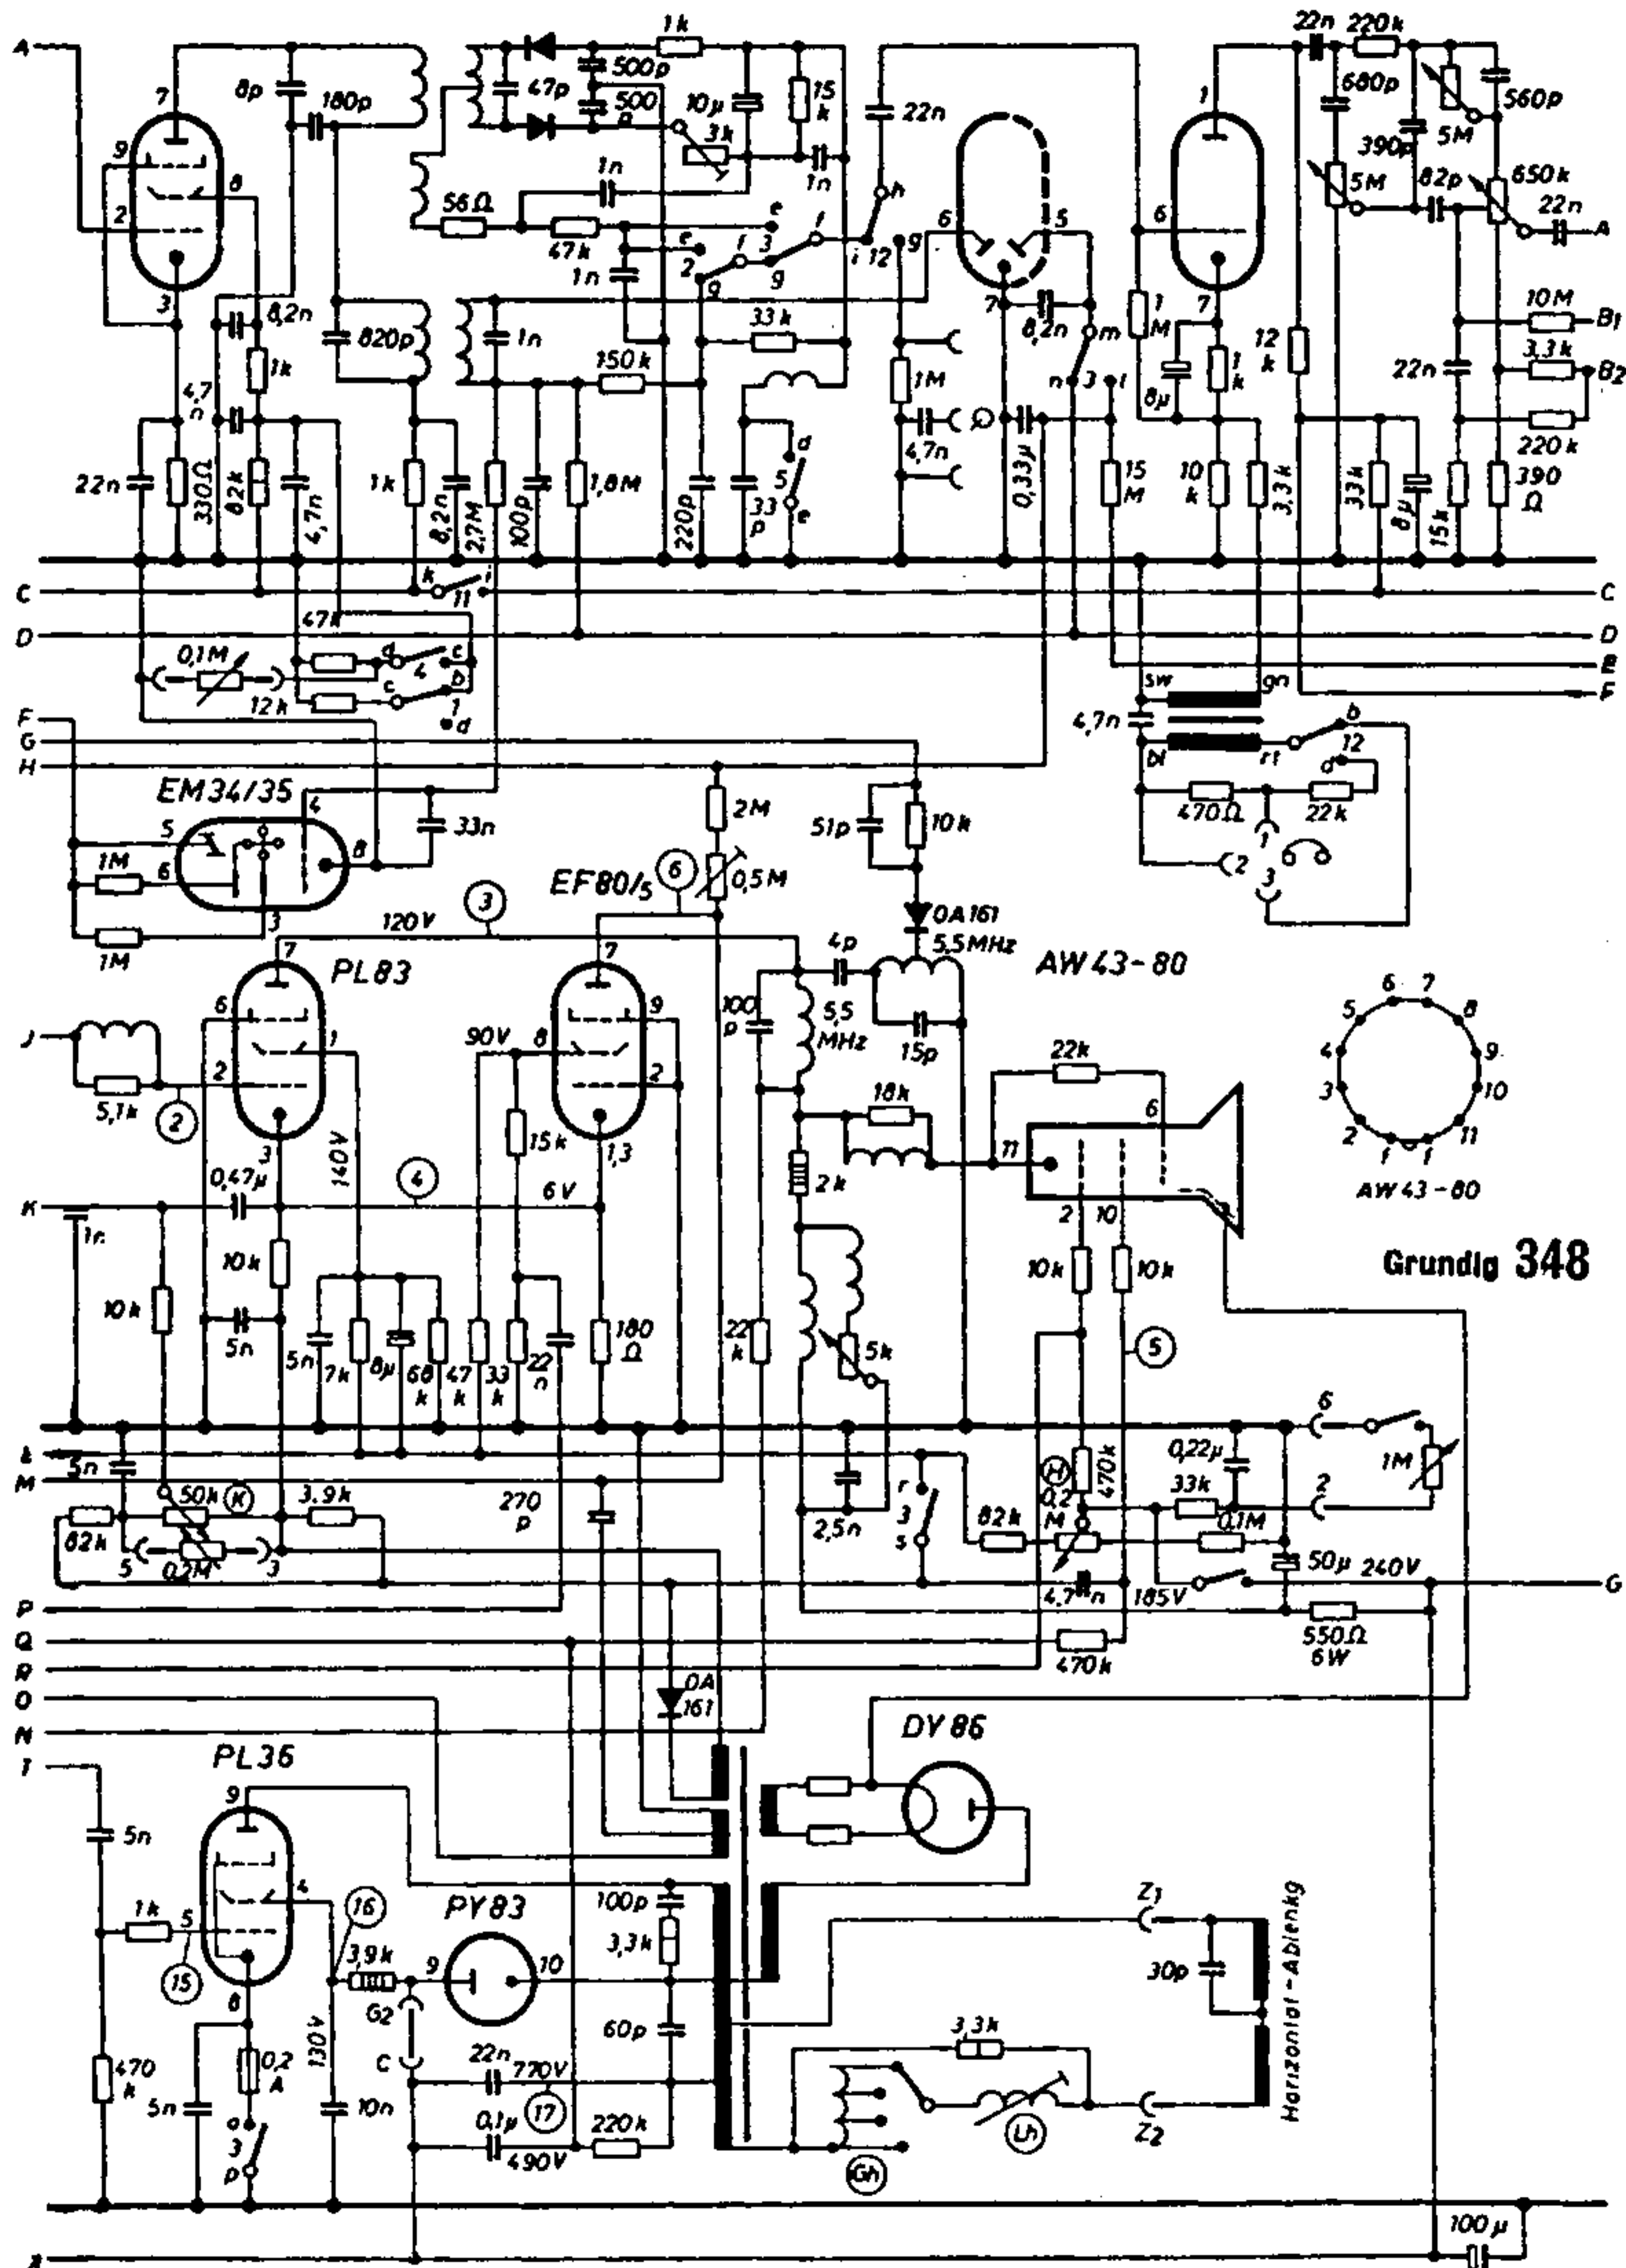


Grundrig 348

EBC 41

EL 84

       U FS K Alle Tasten in Ruhestellung M L D
1 2 3 4 5 6 7 8 9 10 11 12

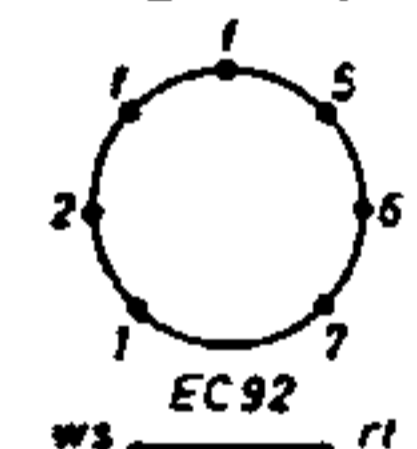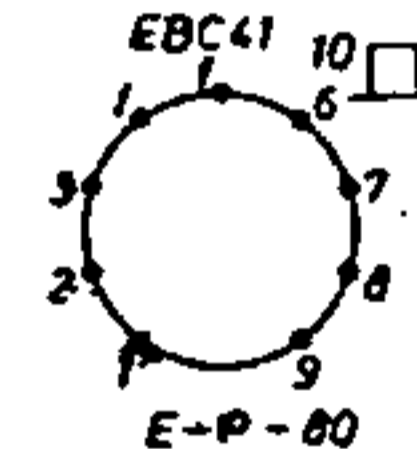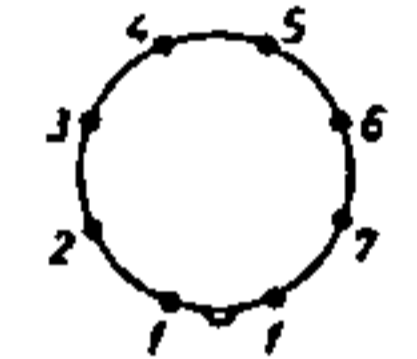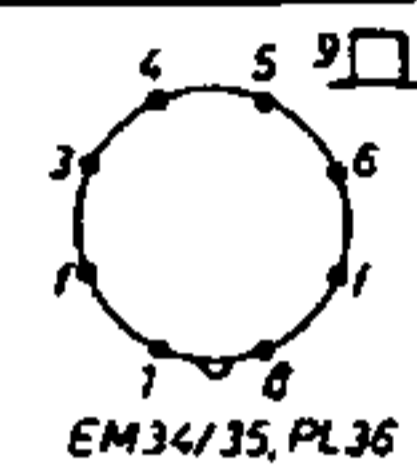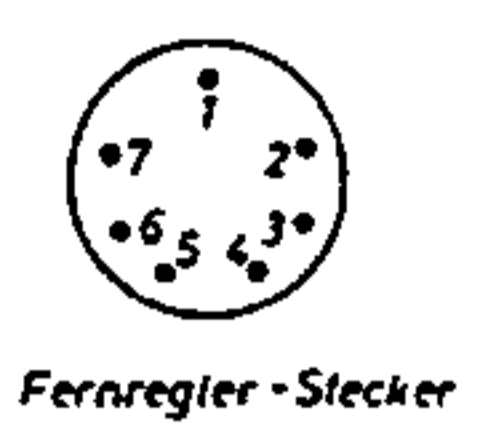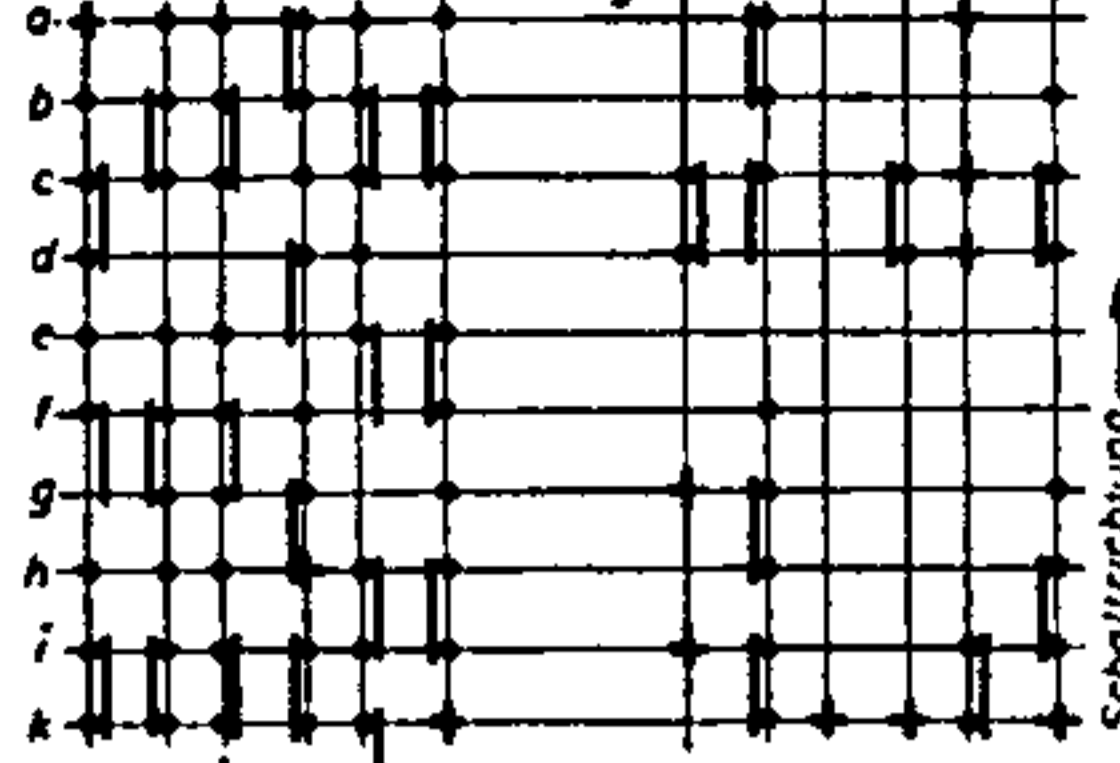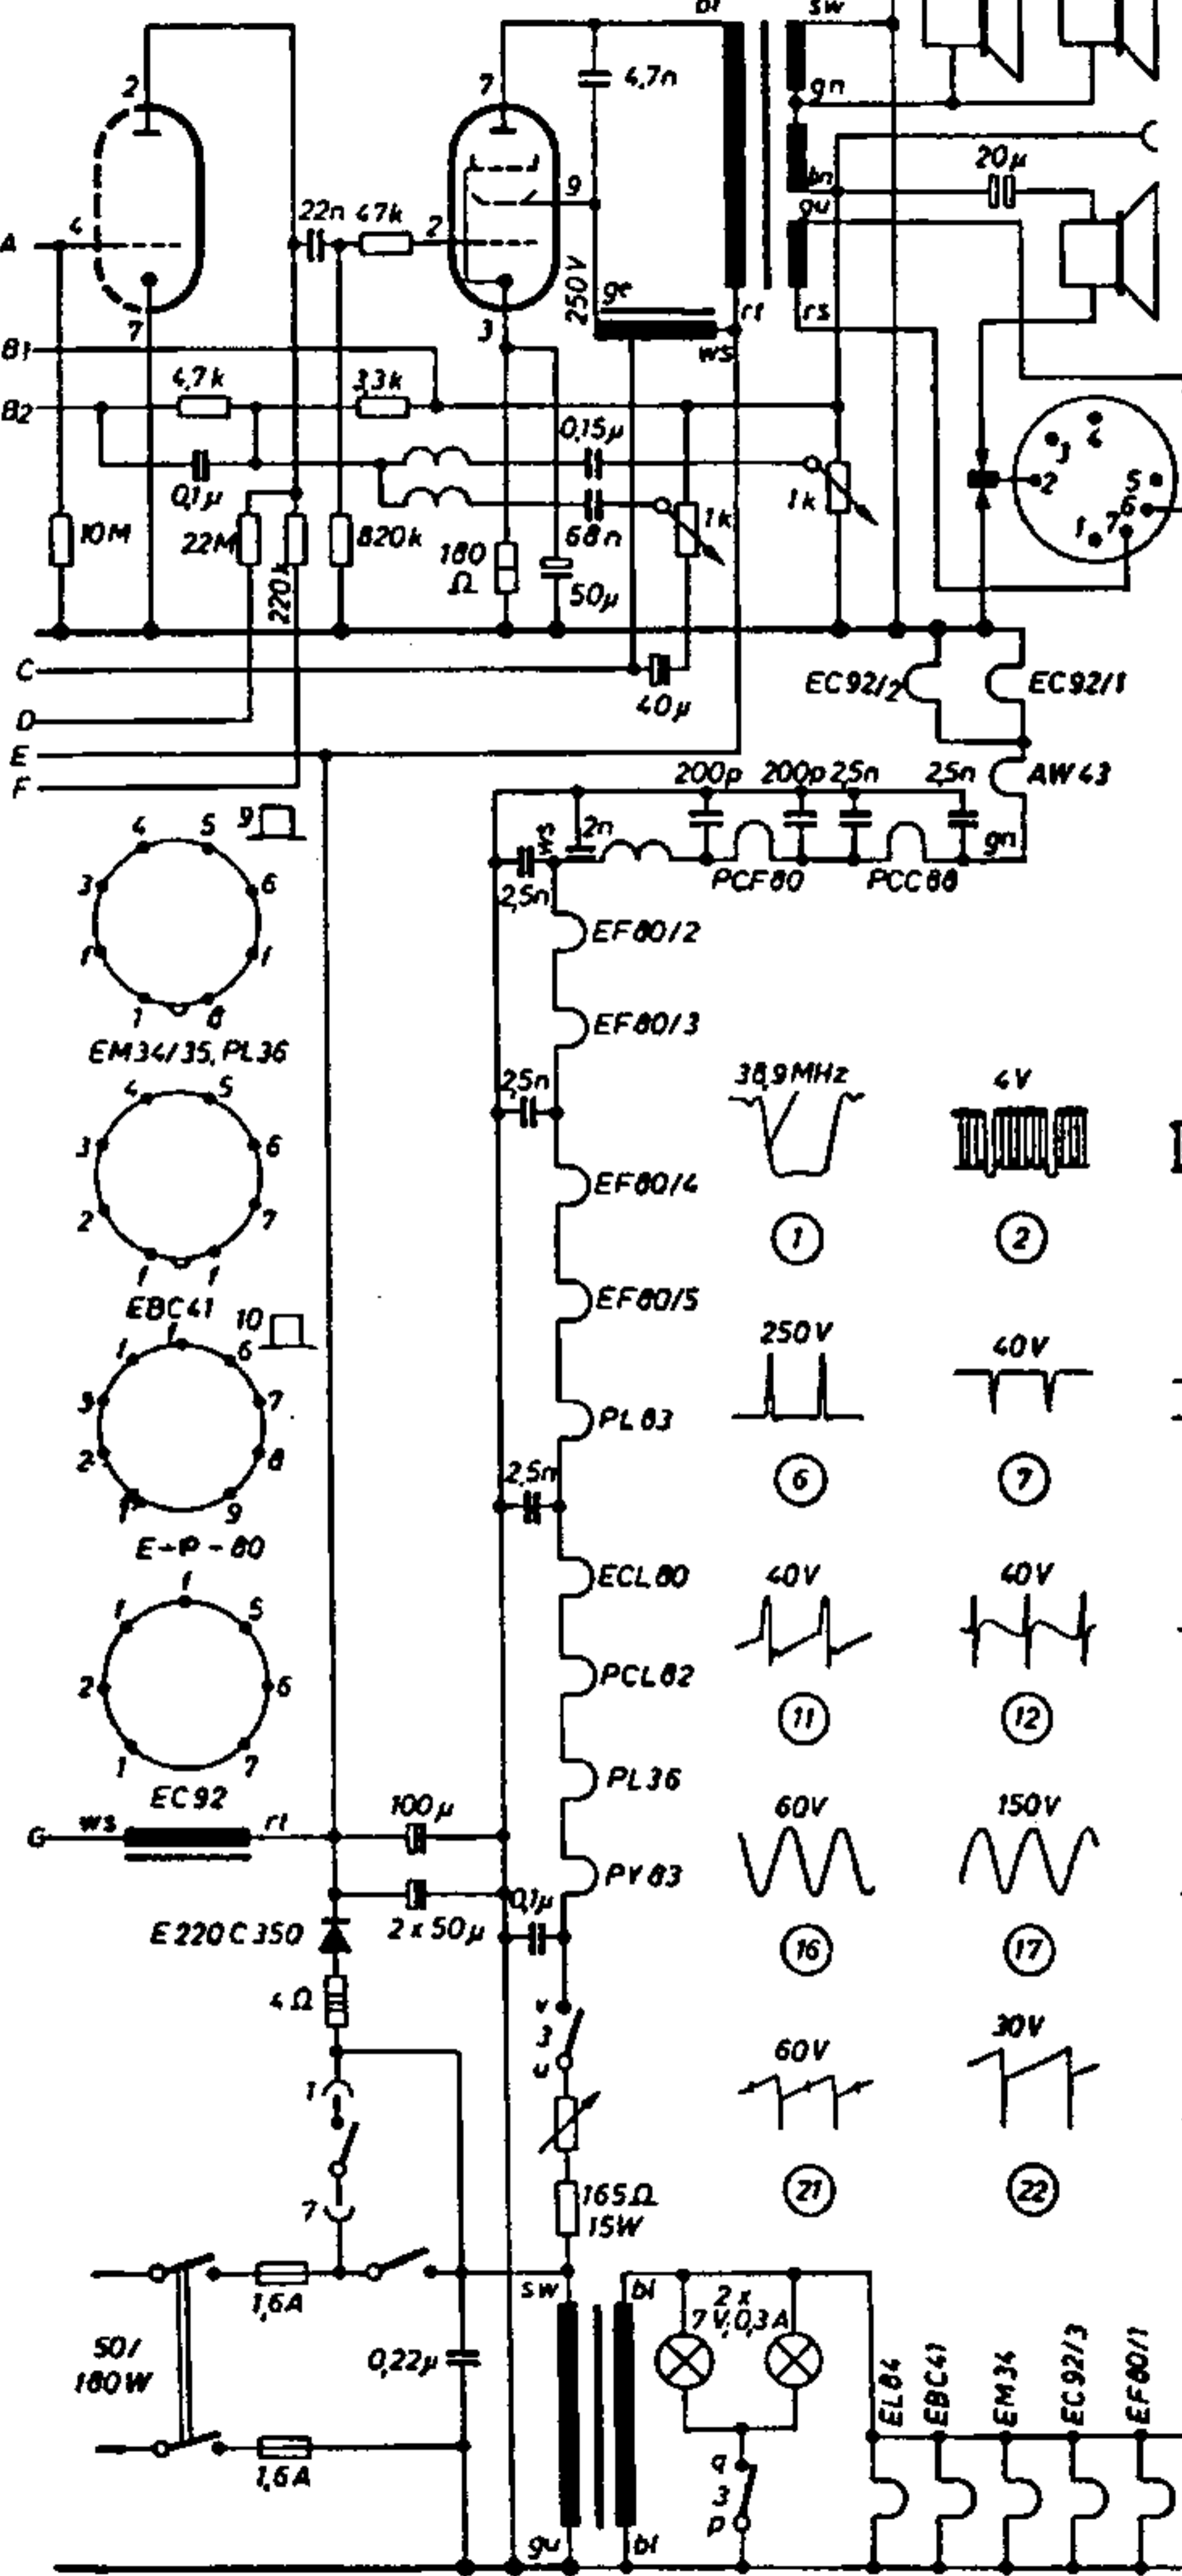

- EF80/2
- EF80/3
- EF80/4
- EF80/5
- PL83
- ECL80
- PCL82
- PL36
- PY83

- 38,9 MHz
- 4V
- 70V
- 7V
- 120V
- 250V
- 40V
- 40V
- 40V
- 120V
- 120V
- 40V
- 60V
- 150V
- 15V
- 40V
- 80V
- 60V
- 30V
- 1kV
- 35V

